


**A**  
**"Short Story"**  
**on**

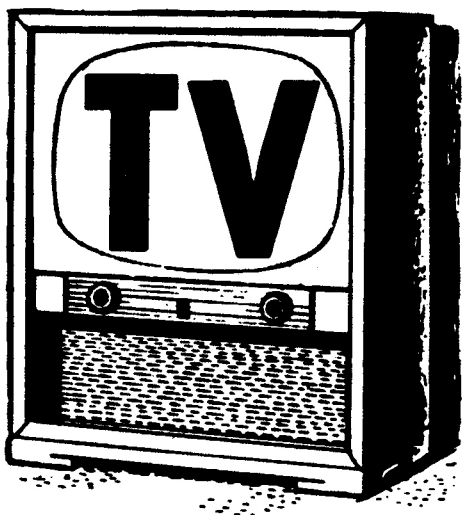

**Educational Services Division**  
**ARGUS CAMERAS, INC.**

If you're a "TV" fan . . . and a camera owner too, you can double your enjoyment of the most popular and exciting programs.

In less time than it takes your set to warm up, you can record favorite TV personalities permanently . . . with your own Camera!

Photo hobbyists everywhere are discovering how truly simple it is.

**. . . LET'S LOOK IN ON A "PRODUCTION."**

**LIGHTS . . . !**

Turn room light off, or down low to avoid glare on screen.

Don't try flash or flood bulbs.

★ ★ ★

**CAMERA . . . !**

Loaded with medium or fast film.

On a firm support or tripod.  
Set about 3 to 4 feet from screen. (Use rangefinder or measure carefully.)

★ ★ ★

**ACTION . . . !**

Expose long enough to record image, short enough to stop movement.

"Shoot" when action on screen is stopped or still for a moment. (See chart)

**. . . AND DON'T BE AFRAID TO EXPERIMENT . . .**

6 to 8 good TV images on a roll of 620 film or 10 to 15 on a roll of 35mm is success . . .with a capital S! !

CAMERA		FILM	LENS OPENING	SHUTTER SPEED	COMMENTS
35MM MINIATURE CAMERA	{	Similar to Argus C4 C3 and A4 Models	Plus X or Supreme	F:2.8	Use cable release if possible.
				F:4 or F:5.6	
MODIFIED REFLEX TYPE	{	Similar to Argus Super 75 or Argus 75	Tri-X  Super XX or Super Pan Press	F:8	Measure distance from screen carefully.
				Fixed Opening	Use a "close-up" lens and follow directions with it.

NOTES: 1. If you develop the film yourself . . . increase normal development time 30 to 40%.

2. Don't use color film . . . on TV pictures . . . not enough light for good exposure.

*If you have a photographic problem  
with which we can help, won't you  
please write to:*

**Sales Service Division  
ARGUS CAMERAS, INC.  
Ann Arbor, Michigan**